 


Hamilton Beach®

Use & Care Guide

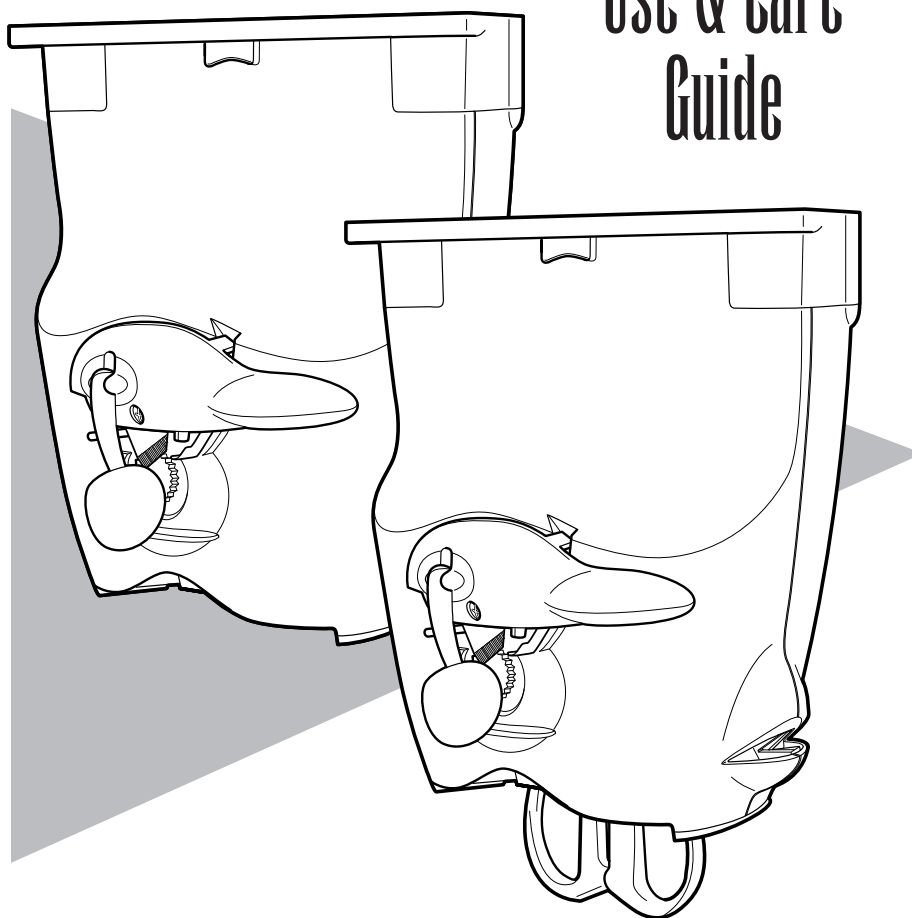

Under-The-Cabinet Opening Center

840051400

Important Safeguards	2	To Open Jars	5
Consumer Safety Information....	2	To Sharpen Knives.....	6
Parts and Features	3	Kitchen Shears (optional)	6
Installation	3-4	Cleaning Your Can Opener	7
Using Your Can Opener	4	Customer Service	7
Tips.....	5	Warranty	8
To Open Bottles	5		

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put cord, plug or can opener in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use or before putting on or taking off parts, or before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, electrical repair, mechanical repair or adjustment.
7. The use of attachments not recommended or sold by Hamilton Beach/Proctor-Silex, Inc. may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces, including stove.
10. Do not open pressurized (aerosol-type) cans.
11. Do not open cans of flammable liquids, like lighter fluid.
12. To reduce the risk of fire or electric shock, do not operate any heating appliance beneath the mounted unit.
13. Do not install the unit over or near any portion of a heating or cooking appliance, a sink or a basin.
14. Use caution when removing or storing kitchen shears in storage slot (optional feature on select model).

 
SAVE THESE INSTRUCTIONS!

CONSUMER SAFETY INFORMATION

This appliance is intended for household use only.


This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug.

Parts and Features

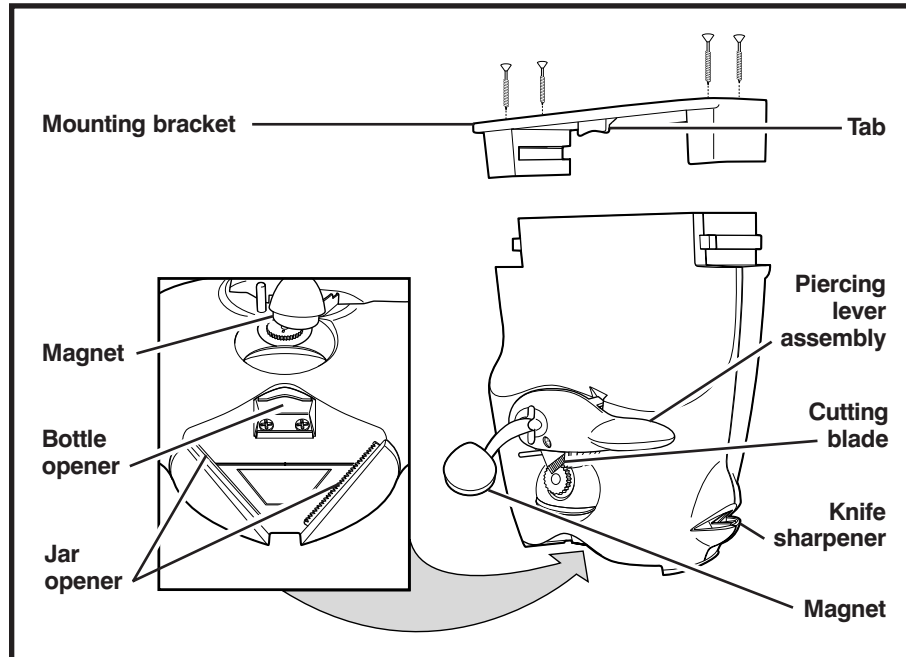


Installation

 1. This can opener is designed to be installed under a cabinet. When selecting a location for installation, please consider the following:
 - An electrical outlet should be within easy reach of the cord so that the cord does not drape over heating appliances or get in the way of your normal work space.
 - Do not install the can opener above a cooking or heating unit, such as a stove, or above a sink or basin.
2. Position the mounting bracket on underside of cabinet, at least 4 inches from wall, and 1 inch from front of cabinet edge. Use a sharp nail or ice pick through bracket holes to mark cabinet for drilling holes.
3. Drill holes through cabinet.

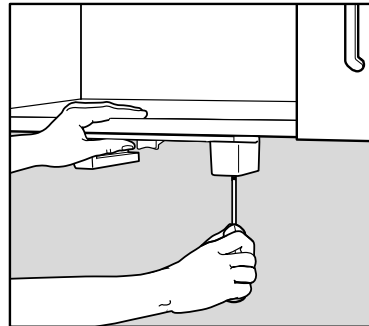


Installation (cont.)

 4. Place mounting bracket on under side of cabinet. Hold nut in screw hole with finger. Insert screw from inside cabinet and tighten with screwdriver.

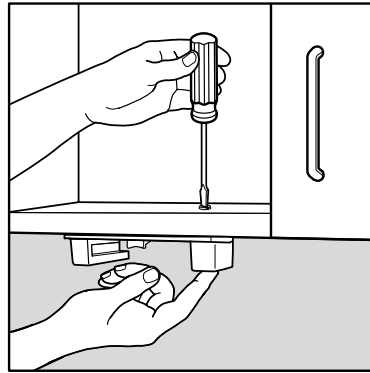

5. Repeat with remaining screws. Place electrical cord through slot on back of can opener. Slide can opener into place from back of bracket. Slide forward until it snaps into place.

 NOTE: Based on the variety of cabinet sizes, the enclosed screws for mounting may not work. Longer or shorter screws may be purchased at your local hardware store.

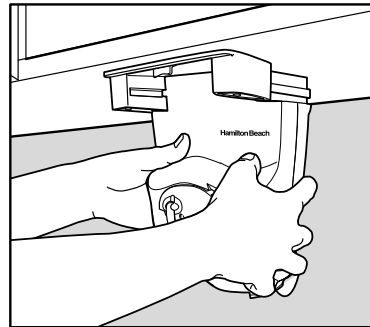

Using Your Can Opener

1. Plug cord into 120 volt AC outlet.
2. Raise piercing lever and magnet.
3. Tilt top of can toward can opener, to position cutting blade inside rim of can.
4. Lower the piercing lever and magnet. This starts the cutting action. The lever will remain down until lid is completely cut. Then the can opener will stop automatically.
5. Hold the can and then raise piercing lever to release the can.
6. Carefully slide the lid away from the magnet.

 
Using Your Can Opener (cont.)

Tips

- The movable magnet may need to be placed onto the lid of smaller cans.
- This can opener is designed to open cans only when mounted under a cabinet. The motor will operate if the unit is not installed, but do not attempt to open cans unless properly mounted.
- If there is a bump in the rim of the can, open the other end or begin the cutting action just after the bump.
- For extremely large or heavy cans, it is recommended that you lightly support the can as it is being opened.

To Open Bottles

Insert top of bottle so cap is under the metal hook. Lightly hold the back of the can opener and then press the bottle down until cap is removed.

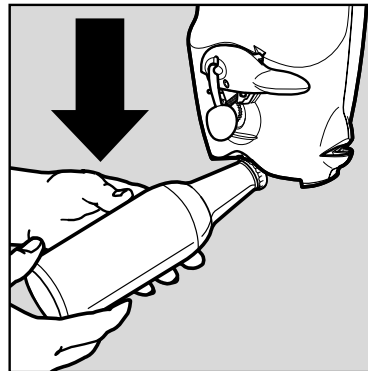

To Open Jars

Slide jar lid in V-shaped opener built into bottom of opening center. The jar should be held firmly, pushing as far up and back as possible. Turn jar clockwise.

Using Your Can Opener (cont.)

 
To Sharpen Knives

Place blade of knife, near handle, in the knife sharpener. The blade should be lying flat. Pull the knife toward you, through the sharpener. Repeat this about 20 times. Do not use a back and forth motion through the sharpener.

To complete sharpening, angle the blade up (as illustrated) and repeat the procedure.

NOTES:

- Under normal conditions, a good knife should not need sharpening more than 3 or 4 times a year.
- Serrated blades should never be sharpened in this unit.
- Scissors cannot be sharpened in this unit.

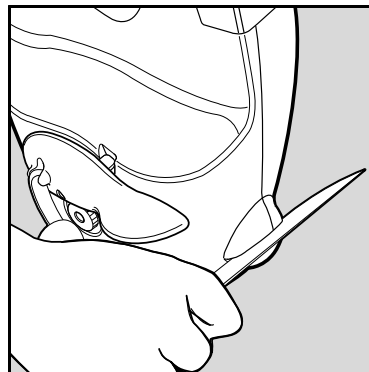

Kitchen Shears In Convenient Storage Slot

(optional feature on selected models)

These shears are perfect for all kitchen chores. The small teeth built into the handles act as a small bottle opener. For best performance, keep blades clean and dry. Hand wash in hot, soapy water. Rinse, dry thoroughly, and return to the storage slot.

Cleaning Your Can Opener

1. Unplug the unit from the electric outlet. Remove can opener from mounting bracket by pushing up on tab of bracket. Slide the unit back and off the mounting bracket.
2. To remove the piercing lever assembly, lift up lever and push counter-clockwise until the whole assembly is released.
3. Wash piercing lever in automatic dishwasher. Or wash in warm soapy water; Rinse and dry thoroughly.
4. To replace the piercing lever assembly, fit the knob on the back of the assembly into the large end of the keyhole on the can opener. Slide and push the knob toward the small end of the keyhole until it snaps into place.
5. To clean the unit, wipe with a clean, damp cloth. Do not immerse unit in water.

Customer Service

Call our toll-free customer service numbers. Please note the model, type, and series number on the bottom of the can opener, or have the can opener close by when you call. This will help us answer your questions.

In USA: 1-800-851-8900

In Canada: 1-800-267-2826

Web Site Address: <http://www.hambeach.com>

KEEP THIS NUMBER FOR FUTURE REFERENCE!

Warranty

TWO YEAR LIMITED WARRANTY

Hamilton Beach/Proctor-Silex, Inc. warrants this appliance to be free from defects in material and workmanship for a period of two (2) years from the date of original purchase, except as noted. There is no warranty with respect to the following, which may be supplied with this appliance: glass parts, glass containers, cutter/strainer, nonstick soleplate and/or nonstick cooking surfaces. This warranty extends only to the original consumer purchaser and does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in the printed directions. HAMILTON BEACH/PROCTOR-SILEX, INC. EXPRESSLY DISCLAIMS ALL RESPONSIBILITY FOR CONSEQUENTIAL DAMAGES OR INCIDENTAL LOSSES CAUSED BY USE OF THIS APPLIANCE. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, serial numbers ready for operator to assist you.)

In the U.S. 1-800-851-8900

In Canada 1-800-267-2826

This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province.

HAMILTON BEACH ♦ PROCTOR-SILEX, INC.

Washington, North Carolina 27889

840051400

PROCTOR-SILEX CANADA, INC.

Picton, Ontario K0K 2T0

Web Site Address: <http://www.hambeach.com>

6/98